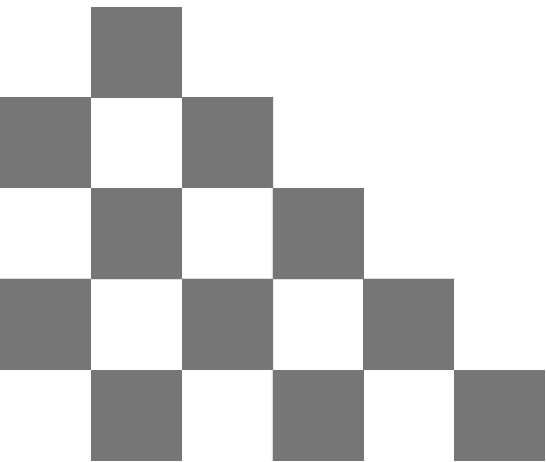
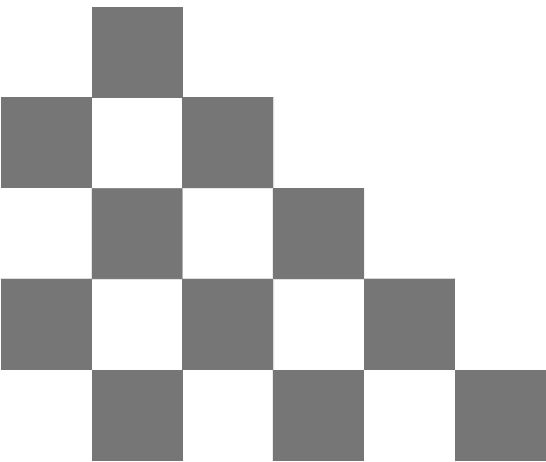




INSTRUCTION







SHOWER ENCLOSURE - XLS





1

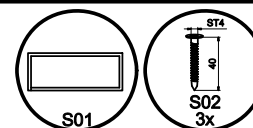
Tools Required(not supplied)

Magnetic Crosshead Screwdriver		Silicone Sealant	
Rubber Mallet		Knife	
Spirit Level		Pencil	
Tape Measure		3mm Drill Bit (suitable for wall type)	Ø3 
Power Drill (with hammer action)		6mm Drill Bit (suitable for wall type)	Ø6 

Extension Profile Kit

S01	S02
	
1x	3x

2

Parts list
(Include):Tools required
for product
installation: